
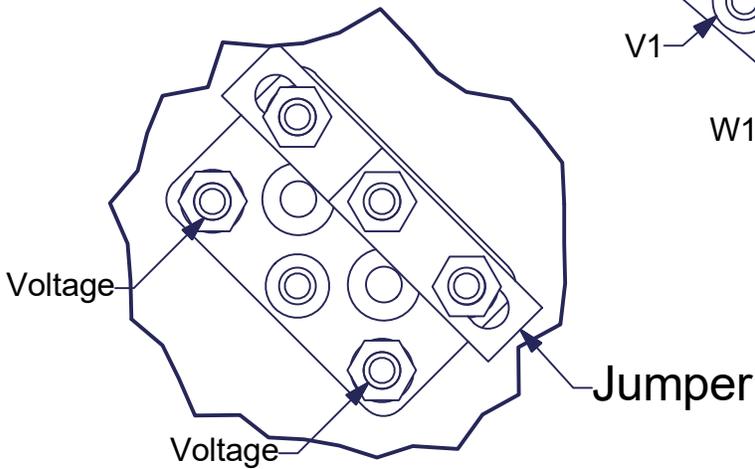


# Appendix A - PTO Wiring Diagram & Jumper Locations


## Attention:

All ATEX motors are supplied with a PTO thermal protection device (internal bi-metallic switch).


The PTO does not interrupt power to the motor when it trips. A contactor must be used in conjunction with the PTO to protect the motor from overheating. Failure to connect the PTO properly to a contactor can result in motor failure.

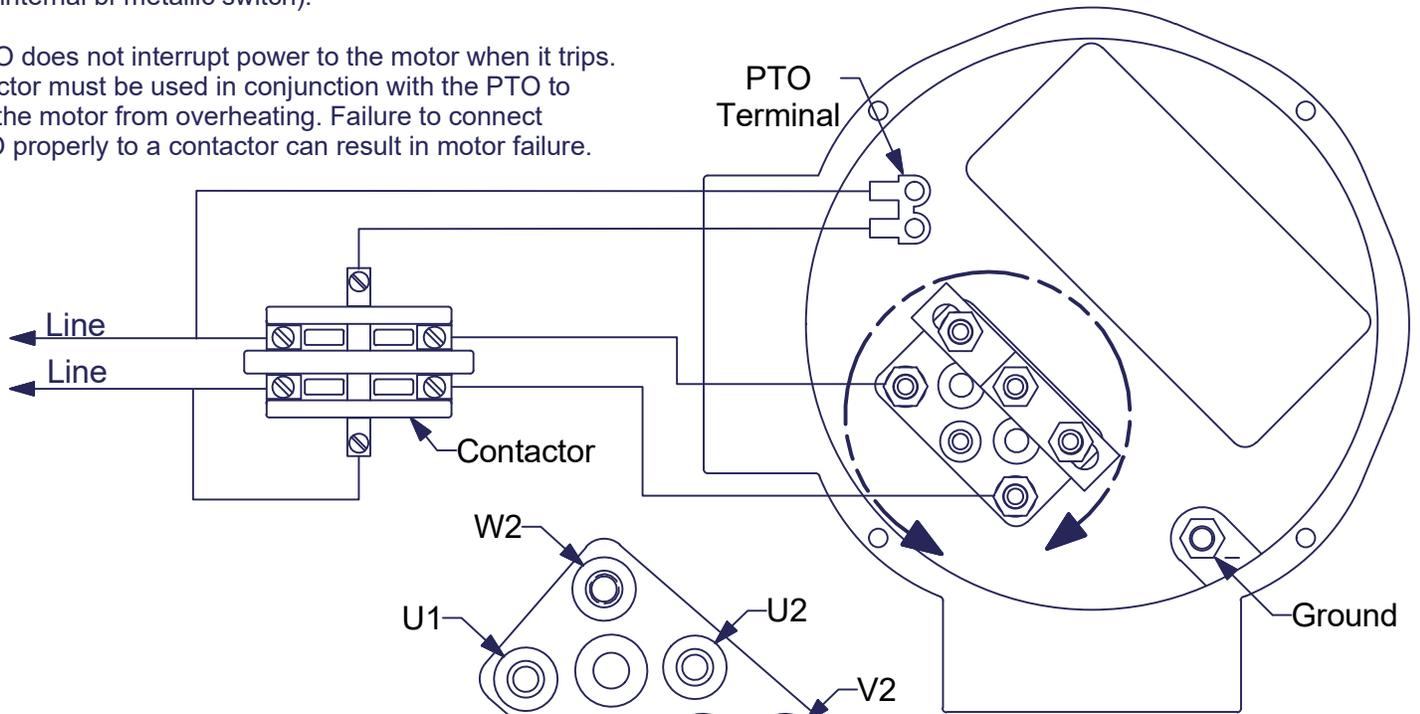


230v 1 Phase

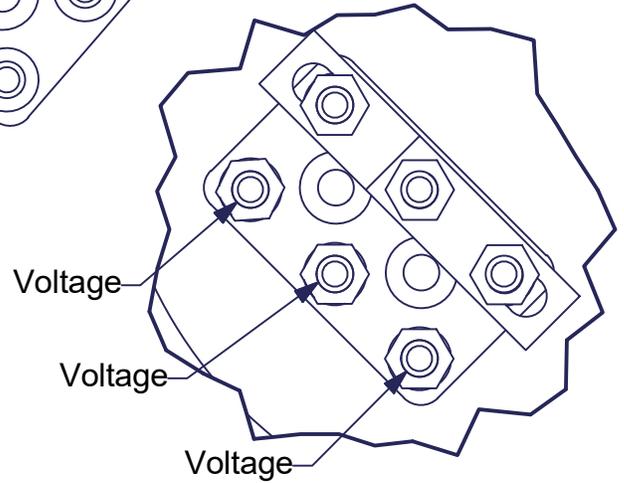

400v 3 Phase

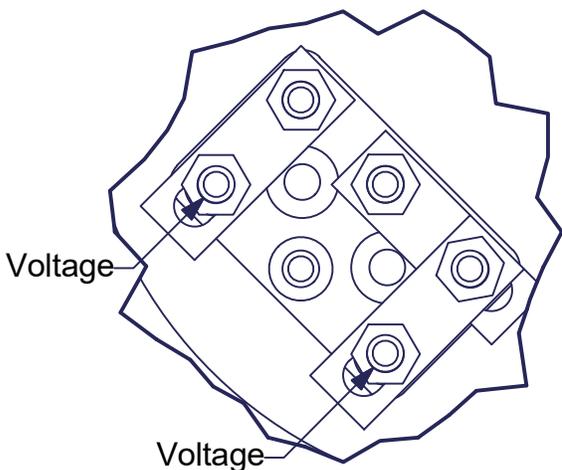

115v 1 Phase

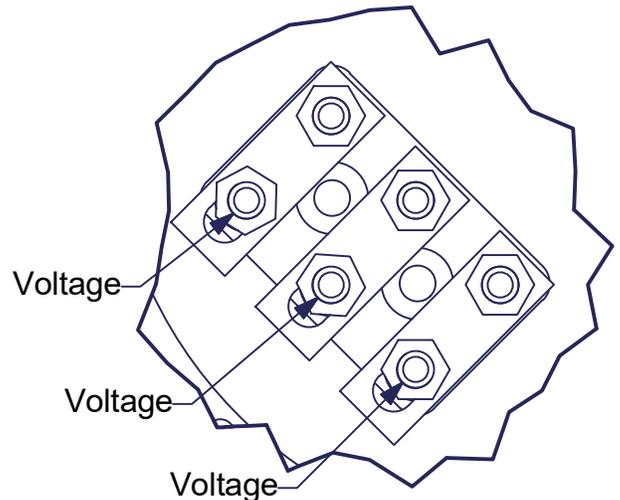

230v 3 Phase